 


flip
video™

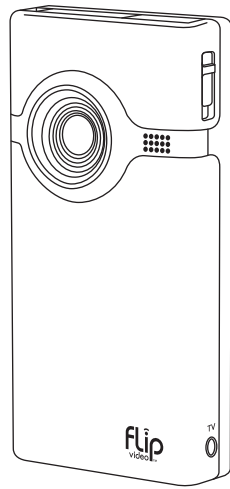

mino

QUICKSTART GUIDE

Get Started

Welcome to Flip Video Mino

- 1 Press power button.
- 2 Press record button. Have fun!



Note: The camcorder is shipped with a partially charged battery.

Camcorder Setup

To Access Camcorder Setup
Starting with the camcorder OFF:

- 1 Press power button to turn on.
- 2 When Flip Video logo appears, press and hold record button.
- 3 Release record button when SET DATE appears.



Setting Date

- Use + and - to adjust the current setting.
- Use < and > to select month/day/year.

 
 
Setting Time

- Use + and - to adjust the current setting.
- Use < and > to select hour/minute/AM/PM.

Turning Off Tones

- Use + and - to toggle the tones on/off.

Camcorder Features

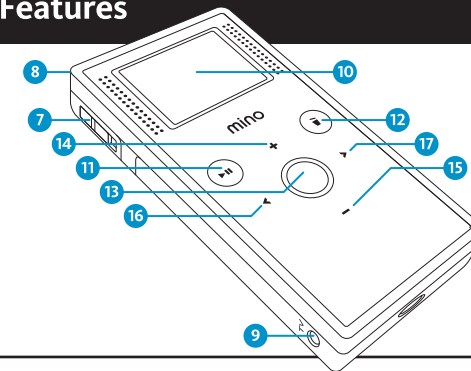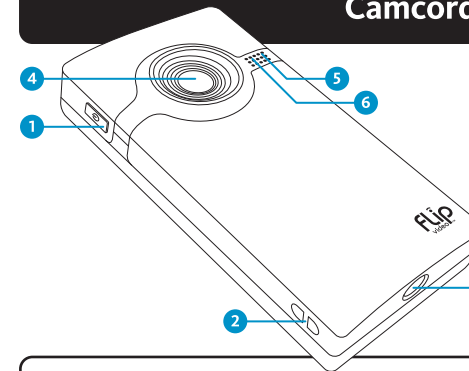


1 Power Button	Press to turn on/off.
2 Wrist Strap Hook	Attach wrist strap, included in package.
3 Tripod Mount	Attach a tripod or other Flip Video accessory. Learn more at www.theflip.com/accessories .
4 Lens	Wipe clean with a soft, dry cloth.
5 Record Light	Red light turns on during recording.
6 Microphone	Built-in wide-range microphone.
7 USB Latch	Slide down to release USB arm.
8 USB Arm	If space does not permit proper connection, use a USB "A"-type extension cable.
9 TV Output Port	Connect TV cable, included in package.
10 Screen	Recording viewfinder/playback screen.
11 Play/Pause Button	Touch to play/pause. Touch and hold to play all.
12 Delete Button	Touch to delete. Touch and hold to lock/unlock the delete button.
13 Record Button	Press and release to start/stop recording.
14 Up Button	While Recording: Touch to zoom in. During Playback: Touch to increase volume.
15 Down Button	While Recording: Touch to zoom out. During Playback: Touch to decrease volume.
16 Left Button	While Paused: Touch to skip to previous video. During Playback: Touch and hold to rewind.
17 Right Button	While Paused: Touch to skip to next video. During Playback: Touch and hold to fast-forward.

Record and Play

Touch-Sensitive Buttons

 Gently touch lighted icons with your finger to activate the controls on the back panel.

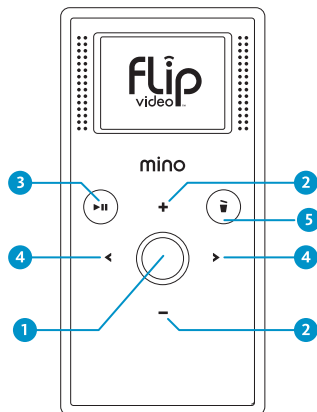

Recording Videos

- 1 Press record button to start/stop. ●
- 2 Touch up/down buttons to zoom in/out. ++

Playing Videos

- 3 Touch play/pause button to start/pause. ►►
- 4 Touch left/right buttons to view previous/next. ◀▶

 
Deleting Videos

- 5 Touch delete button. ▢ Select "Yes" to confirm.

Tip: Hold left/right during playback to rewind/fast-forward.

Save, Edit, and Share

- 1 Slide USB latch down. USB arm flips up automatically.
- 2 Connect Mino to USB port on computer.
- 3 Launch the "Flip Video for PC" or "Flip Video for Mac" icon.

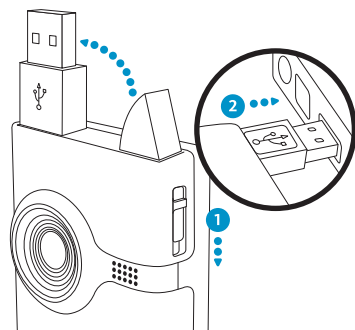


Flip Video Program Features

- Browse, play, and delete your videos.
- Save your videos to your computer.
- Make custom movies with music.
- Snap photos from your videos.
- Share your videos online or by email.
- Upload to AOL, YouTube, and MySpace.

Click "Help" inside the Flip Video Program for detailed instructions on all program features.

Recharge Battery

 
- 1 Connect Mino USB arm to computer's USB port.
- 2 Blinking light indicates charging. The light stops blinking when fully charged.

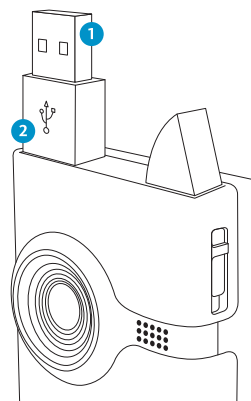

- Mino uses a sealed, rechargeable battery.
- Recharging a dead battery will take about 3 hours.
- You may leave the camcorder attached to the computer even after the battery is fully charged.
- The optional Flip Video Quick Charger can charge the battery in about 2 hours.

View On Television

 - 1 Power off camcorder and television.
- 2 Connect camcorder to television with included TV connection cable.

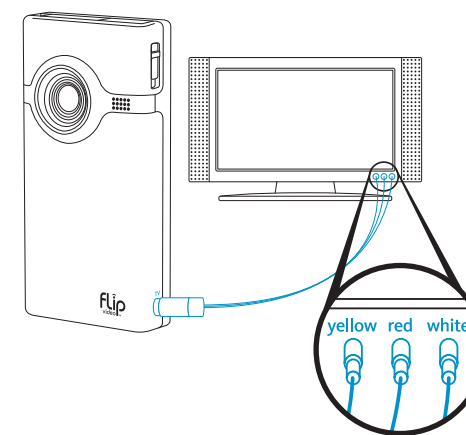

- 3 Power on camcorder and television.
 - Camcorder screen turns off when connected to television.
- 4 Switch your television to VIDEO input.
 - See television manual for instructions.
- 5 Touch play/pause button to start/pause playback. ►►

Included In This Box

- Flip Video Camcorder
- TV Connection Cable
- Wrist Strap
- Soft Case
- Quickstart Guide
- Warranty/Safety Information

Flip Video Support

Support

Go to www.theflip.com/support

Registration

Register online at www.theflip.com/register

Declaration of Conformity

We, Pure Digital Technologies, Inc.
30 Maiden Lane
6th Floor
San Francisco
California 94108



Declare under our sole responsibility that the product video camcorder model psv-460 complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.